

What to do if...

NO SOUND IS COMING FROM THE SPEAKERS

1. Make sure the mics are all off.
2. Make sure the PGM button is lit on the far right channel (the one with the volume knobs).
3. Make sure the PGM button is lit on the channel you are playing.
4. Make sure you are playing something.
5. Make sure the speaker volume is turned up.
6. Fill out a report in the trouble log at staff.wriu.org