

What to do if...

## YOU WANT TO PLAY FROM A USB STICK

1. Insert the USB stick into the port on the CD player.
2. Press the source button on the CD player (below the bottom left corner of the display).
3. If the file is in a folder, press the folder button, then scroll through the folders using the jog knob.
4. Scroll through the files using the jog knob.
5. Put the jog knob to select the file.